T708

User Manual

Internet Tablet

Table of Contents

THANK YOU 3
Package Contents 3
Features 4

GETTING TO KNOW THE TABLET 5

Turning the Tablet on and off 7
About the Touchscreen 8
Protective Film 8
Touchscreen Actions 8
About the Orientation Sensor 9
Charging the Tablet 10
Inserting a Memory Card 10
Resetting the Tablet 11

GETTING STARTED 12
Home Screen at a Glance 12
About Applications 13
Preinstalled Applications 13
Installing Applications 14
About Menus 15
About Notifications 15

CONNECTING TO THE INTERNET 17
Requirements 17
Connect to a Wi-Fi network 18

BROWSING THE WEB 20

MANAGING APPLICATIONS 26

OPTIONAL CONNECTIONS 28
Connecting to a Computer 28
Connecting to a TV 29
Connecting Headphones 30
Using the USB Full-Size Adapter 30
Connecting a Keyboard 30
Connecting a Storage Device 31

SPECIFICATIONS 32

SUPPORT 33

SAFETY NOTICES 34

English

Thank You

Congratulations on your purchase of a DOPO Internet Tablet. This guide is provided to help you get started quickly with your player; please read it carefully and save it for future reference.

For detailed instructions, up-to-date information, and helpful tips, please visit the DOPO website at www.doublepowertech.com

This manual is available for download from the DOPO website as a PDF file.

To view PDF documents, download and install the free Adobe Acrobat reader from the Adobe website at www.adobe.com.

Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

- DOPO Internet Tablet
- Power adapter
- USB cable
- USB host/keyboard adapter

This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose of all packing materials after opening.

Features

- Browse the Web.
  Visit your favorite websites
- Check your e-mail
  Keep in touch with friends and family
- Watch YouTube™ videos
  Browse the world's most popular video-sharing community
- Read your favorite books
  Download thousands of books with the included E-book reader *
- Discover thousands of apps for Android™
  Games, applications, and more with the installed marketplace
- HDMI™ output to your TV **
  Enjoy videos, photos and more in the comfort of your living room
- Connect to the Internet wirelessly
  High-speed Wi-Fi 802.11 b/g/n networking
- Enjoy your media library anywhere
  Portable powerhouse plays popular music, video, and photo formats
- microSDHC memory card reader
  Increase your storage capacity (up to 32 GB supported)
- Built-in camera
  Convenient front-facing camera
- Automatic orientation detection
  Read any way you want; the display adjusts automatically!

* Reading books in the ePub format requires the included E-book reader application.

** Requires optional HDMI cable (Type A-to-Type C). 1080p HD video playback requires a video file encoded at 1080p. Streaming video quality will be affected by the source, and the quality and condition of your network connection.

Getting to Know the Internet Tablet

English

Unit at a Glance

Name		Description
1	Vol - key	Press to decrease the volume.
2	Vol +key	Press to increase the volume.
3	Power and lock key	key to switch the tablet on or off.
4	ESC key	Tap to return to the previous screen/ page. if the keyboard is in use, close the keyboard.
5	Home key	Tap to return the home menu.
6	Menu key	Tap to view the option menu..Note: When you tap the Menu key from within an application, you will see the sub-menu for the application
7	Camera	0.3M camera

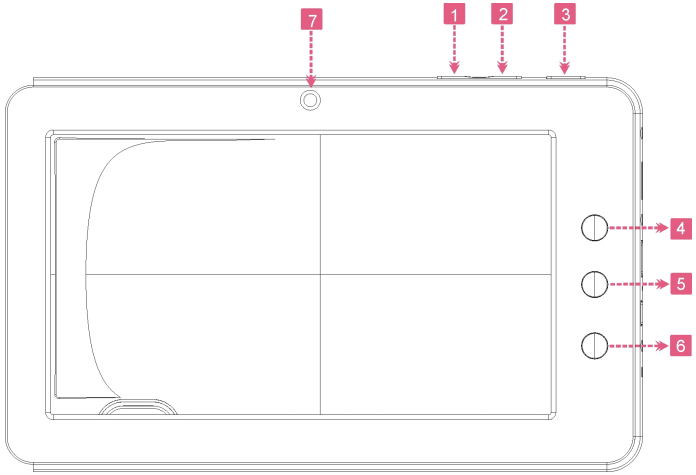

Name		Description
8	Earphone jack	To connect your earphone
9	Micro SD card slot	To insert an Micro SD card
10	HDMI	1080P HDMI output
11	Reset hole	Press to reset the tablet. Insert a paper clip or other small object with a narrow tip into this reset hole.
12	Mini USB port	Connect to a computer via a USB cable to transfer data(e.g.music, vodeps,photos and other files).
13	Power jack (DC input)	Connect to a 5V output adapter
14	Speaker	Speaker

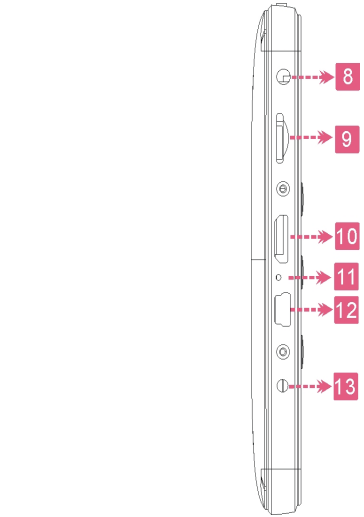

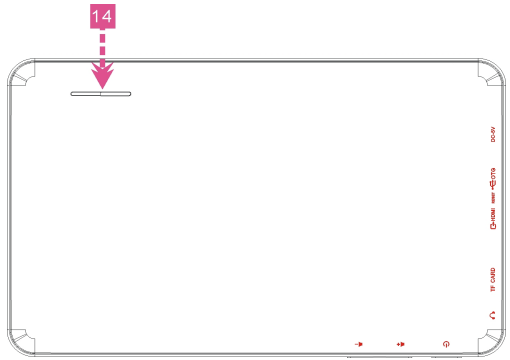

English

English

Turning Your Device Off

1. Press and hold the **Power/Lock Key**.
2. At the prompt, touch **Power off**.

Setting Up Your Device

When you first turn on your device, you are asked to set up a few things.

1. A **Welcome** screen displays. Scroll through the list and touch the language you want your device to use, such as, English (United States). Touch **Start**.
2. On the **Wi-Fi setup** screen, chose one of the following options:
   - Touch **Add network** to enter a Network SSID that is not listed.
   - Touch **Refresh list** to make sure you have an accurate list of Wi-Fi networks.
   - Touch one of the Wi-Fi networks in the list, enter the password, and touch **Connect**. Touch **Back** to connect to a different Wi-Fi network or touch **Connect** to continue.
   - Touch **Skip** to perform this task later. For more information, refer to *"Wi-Fi Settings"* on page 127.
3. Read the **Use Google's location service** screen information and enable either or both of the Google location services.

   Touch **Next** to continue.
4. On the **Set date and time** screen, touch GMT+00:00, scroll through the list, and touch the time zone for your location. If necessary, repeatedly touch above or below the **Date** (month, day, year) and **Time** (hour, minute, and AM/PM) fields to set the correct date and time. Touch **Next**
5. Your new device uses your Google account to fully utilize its Android features, including Gmail, Maps, Navigation, Google Talk, and the Android Market.

   The **Sign in with your Google Account** screen, allows you to create a new Google account or sign in, if you already have a Google account.
   - Touch **Next** and then touch **Create account** or enter the email address and password of your existing account.

   – or –
   - Touch **Skip** to perform this task later.
6. Read the **Backup and restore** screen information and enable either or both options.
7. Touch **Done**

   The main Home screen displays.
8. If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the **Security** settings menu.

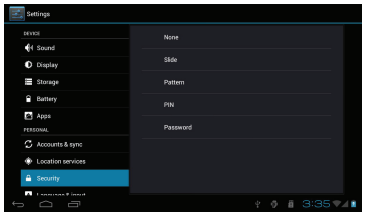

WARNING: Please write down your password lock pattern/PIN/ Password Misplacing or for getting this method will lock the user out. Re covering the unit will reset the device back to factory defaults.

ALL YOUR DATA & PRO GRAMS WILL BE LOST

About the Touchscreen

Your tablet comes equipped with an easy-to-use touch-screen.

Our capacitive multi-touchscreen requires gentle fingertip touch on the glass screen to activate tablet's functions. Multiple fingers may be used to perform gestures (e.g. 2-finger picture zoom).

Please note: Your finger tips must not be covered. A stylus may be used. Make sure it is for capacitive touch-screens.

To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touch-screen controls.

Protective Film

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

Touchscreen Actions

You can control the functions of the tablet by using the touchscreen in combination with the three touch keys located on the bezel. To control the tablet with the touchscreen, use your fingertip to manipulate icons, buttons, menu items, the on-screen keyboard, and other items displayed on the screen.

You can perform the following actions on the touchscreen using your fingertip or appropriate stylus.

Touch:	To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply touch them with your fingertip.
Touch and Hold:	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.

Drag:	Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.
Swipe:	Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view. To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip. Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead.
Double-tap:	Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a web-page section will cause the browser to zoom and fit that section to the width of the screen.

About the Orientation Sensor

The tablet contains a sensor that will automatically change the orientation of most screens as you rotate the tablet. The sensor works best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not fat on its back).

The orientation sensor can be turned on and off in the **Display** settings menu.

Charging the Tablet

The tablet comes with a built-in rechargeable lithium-polymer battery.

Before using the tablet, the battery should be charged fully. The Status Indicator will light blue when the battery is charged fully.

To charge the battery:

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the Power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged.

The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the device. Do not leave the de-vice in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Inserting a Memory Card

The tablet accepts microSDHC memory cards. Insert a memory card into the microSDHC card slot to:

- Increase the memory capacity of your tablet
- Play media files stored on the memory card (e.g., music, video, or photo files).

To insert a memory card:

1. Align the memory card with the card slot. The metal contacts of the memory card should face down away from the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place.

Do not attempt to insert objects other than a microSDHC memory card into the card slot. A compatible memory card should fit easily into the card slot; if you encounter resistance, check the alignment of the card. Do not attempt to force the card in.

Avoid touching the gold contacts of the memory card.

English

English

To release and remove a memory card:

1. **UNMOUNT the memory card.**

   a. From the home screen, tap the **Launcher Tab**, and then touch **Settings** to show the settings menu.

   b. Touch **Storage** to show the storage settings.

   c. Touch **Unmount SD card** to prepare the memory card for safe removal.

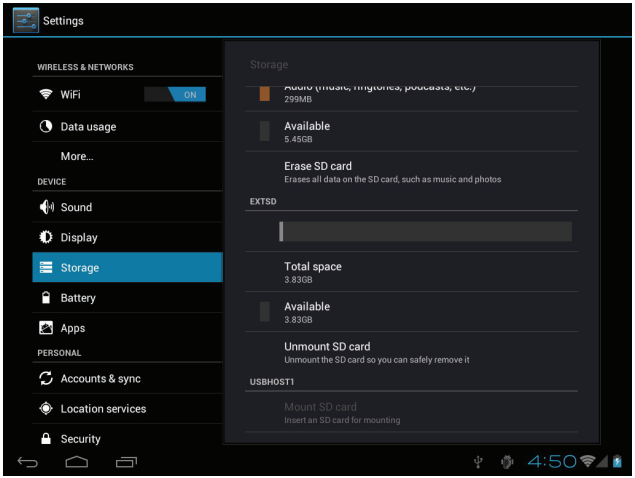

2. Push the card further into the slot until you hear a click. The card will spring out of the slot.

3. Grasp the card by its edge to remove it.

To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.

Getting Started

Home Screen at a Glance

The home screen is the starting point for all of the features of your tablet.

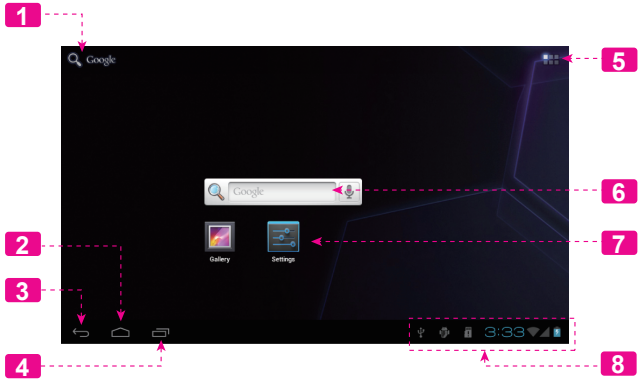

	Name	Description
1	**Google Search**	Touch to search with Google browser.
2	**Home** icon	Touch to back to the central Home Screen.
3	**Back** icon	Touch to back to the previous screen.

	Name	Description
4	Recent Apps	Touch to display the list of thumbnail images of apps you have worked recently. Touch an App to open it.
5	Launcher Tab	Open the Launcher to view the list of all Applications and Widgets installed on the tablet. Touch the Launcher tab to open the Launcher.
6	Widgets	Widgets are small applications that you can use directly from the home screen. For more information, refer to the "Widgets" section on page 18.
7	Icons	Touch an icon to open an application or folder.
8	Notification bar	Shows notification icons such as time, battery level, and the network signal strength; touch the bar to open the full Notifications panel. Touch a Notification icon to display more detail.

English

About Applications

To open an application, touch the application icon on the home screen or in the Launcher.

Launcher screen:

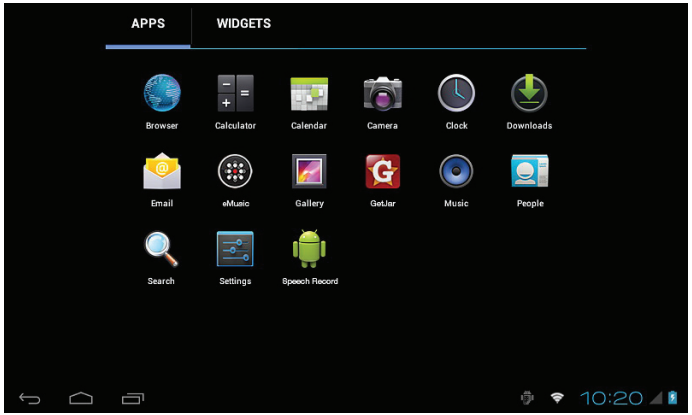

The screen shown above is for illustrative purposes only. DOPO reserves the right to modify and improve the final list of applications available on the tablet.

Preinstalled Applications

Some applications have been installed on your tablet for your convenience. These applications include:

	Download and read thousands of e-books. Supports the ePub standard.
	Browse the web.
	Display the calendar or record events and appointments to manage your schedule.
	Perform simple mathematical operations.
	Take pictures or videos with the front-facing camera.

	Play music.
	Access the Settings menu to adjust the tablet's options.
	Launch the mobile YouTube™ browser page to watch internet videos.
	View the current time, or set an alarm.
	Check your e-mail.
	View and manage files stored on the tablet.
	View photos and videos, plus edit photos.

Installing Applications

You can also download an install additional applications from the device's applications marketplace, the web browser, or other sources.

The tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the **Application settings** menu.

Your DOPO Mobile Internet Device may include access to, or information on, content, products, applications and services from third parties. Your use of such third party content, products, applications and services is at the discretion of such third party and expressly governed by such third party's terms of use, including any such third party's privacy policies, for such content, products, applications and services. Double power technology co. *is not responsible for and expressly disclaims all warranties of any kind with respect to all such third party content, products, applications and services. Double power* technology co. *will not be responsible for any loss, costs, or damages incurred due to your access to or use of third party content, products, applications or services.*

English

About Widgets

Widgets are self-contained applications that you can place on the Home screens to access your favorite features.

Adding Widgets to a Home Screen

1. Navigate to the Home screen which you want to place the Widget on.
2. Touch the **Launcher Tab**.
3. Touch **WIDGETS** to show all widgets, and then hold on a widget icon to add it to the Home screen.

Removing Widgets

Touch and hold the Widget until Remove icon appears at the top side of the screen, then drag the Widget to the Remove icon to remove it.

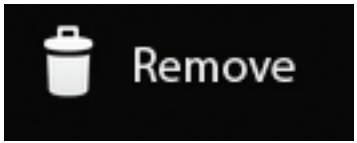

About Notifications

The icons that appear in the Notification bar at the bottom right corner of the screen alerts you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

- Touch the **Notification** bar to open the Notifications panel.

To respond to a notification:

Touch a notification in the list; the Notifications panel will close and the application associated with the notification will launch.

4. To close the Notifications panel:

- Touch any other area of screen except the Notifications panel , or;
- Touch the **Back** icon.

Connecting to the Internet

This tablet can utilize Wi-Fi data networks to connect to the Internet.

- ✧ Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.

Requirements

In order to connect to the Internet, you will need either of the following:

A wireless router or access point with a broadband Internet connection

The wireless router must support Wi-Fi 802.11b/g connections. If the router supports 802.11n, make sure that it has been configured to acc qept 802.11b/g connections as well.

A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.

You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.

Connect to a Wi-Fi network

The Notification bar displays icons that indicate your tablet's Wi-Fi status.

	Connected to a Wi-Fi network (waves indicate connection strength).
[no icon]	There are no Wi-Fi networks in range, or the Wi-Fi radio is off.

1. **Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:**

   a. Go to the Home screen:

   Touch the **Home** icon.

   b. Open the Launcher screen:

   Touch the **Launcher Tab**, then touch **Settings**.

   c. Open the Wireless & networks menu:

   Touch **WIRELESS & NETWORKS**.

   d. Open the Wi-Fi settings menu:

   Touch **WiFi**.

   e. Make sure that the Wi-Fi option box is setted to ON: Touch and slide the block right to enable the **Wi-Fi** connection.

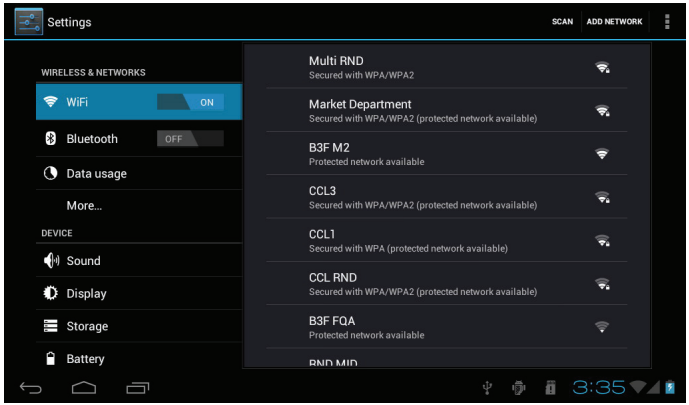

When Wi-Fi is on, the tablet will look for and display a list of available Wi-Fi networks.

If a network that you have connected to previously is found, the tablet will connect to it.

If you don't see your network in the list, you can force the tablet to re-scan. To scan for networks, tap the **SCAN** *icon that located on the top right corner of the screen.*

2. **Select an available Wi-Fi network to connect to:**

In the same Wi-Fi settings menu above, touch a network in the list.

English

If the network is open, the tablet will prompt you to confirm connection to the network. Touch **Connect** to confirm.

If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch **Connect** to confirm.

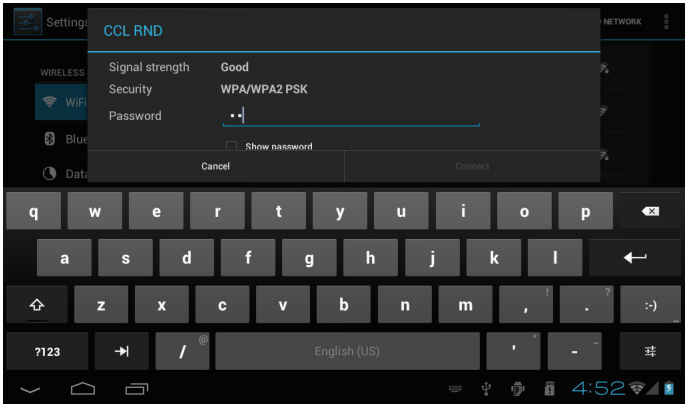

When you have successfully connected to a Wi-Fi network, the Notifications bar at the bottom of the screen will show a Wi-Fi signal indicator.

To learn about how to add a Wi-Fi network when it is not in range or when the router is set to obscure the network name (SSID); or to configure advanced Wi-Fi options, please refer to the manual.

Browsing the Web

Browser

Your device is equipped with a full HTML Browser that allows you to access the internet.

1. From the Home screen, touch **Browser** .
   – or –
   From a Home screen, touch **Apps** ➔ **Browser**
   The Most visited screen displays.
2. Touch an entry, such as Google.
   The Google home screen displays.

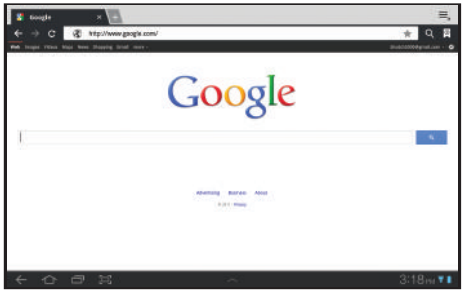

Tip: Browser appears by default as a Primary shortcut on the Home screen.

Navigating the Web

The following options are available for web navigation.

Command Keys

- Touch **Back** or to return to the previous page.
- Touch and h **Back** to display a list of Most visit pages.
- Touch to go forward to a recent page.

Touching and dragging

- Touch and drag your finger on the screen to navigate pages and to reposition pages within the screen.

Entering text in a field

- While browsing, touch a text field to display the virtual QWERTY keyboard to enter text.

Zoom

- Tap the screen twice to zoom in or out.
- Use two fingers, such as your index finger and thumb, to zoom out by making an inward pinch motion on the screen. To zoom in, make an outward motion by swee ping your fingers out.

Tip: For convenient browsing, you can rotate the device to landscape mode.

English

Selecting items on a page

While browsing, usegestures anduseto navigate:

- Touch an item to select it.
- Touch a hyperlink to follow the link.
- Touch and hold on a hyperlink for these options:
  - **Open** : Open the linked page.
  - **Open in new tab** : Open a new window to display the linked page.
  - **Save link** : Save the linked page to Download history.
  - **Copy link URL** : Save the link's URL to the clipboard.
  - **Select text** : Copy the link text to the clipboard.

Using Browser Windows

You can have multiple windows open at one time and easily switch between windows.

1. From the Home screen, touch **Browser**.
2. To open a new window, touch at the top of the screen.
3. To switch to another open window, touch its tab at the top of the screen.
4. To delete an open window, touch the tab at the top of the screen, and then touch .

Entering a URL

Access a website quicklyby entering the URL.

1. From the Home screen, touch **Browser** .
2. Touch the **URL** field at the top of the screen, then enter the URL using the virtual QWERTY keyboard.

   As you enter characters, potential matches display.

Note: Use the **Delete** key to clear the URL field, if necessary.

3. Touch a match to complete the URL.
   – or –
   Continue entering characters and touch to load the page.

Copying Fields or Text

Copy information from a webpage to the clipboard for pasting, searching, or sharing.

Selecting, Copying, and Pasting Text

1. From the Home screen, touch **Browser** .
2. Browse to a webpage.
3. On the webpage, touch and hold on the text until you see the text you want highlighted , then stop touching the screen.
   The text is highlighted.
4. Touch and drag the tabs to the left or right to select more or less text.
5. Touch **Copy** at the top of the screen to copy the selected text or touch **Cancel** to stop.
6. To paste the copied text, navigate to the desire d field (or to another application), then touch and hold in a text field and touch **Paste** in the pop-up.

Copying and Pasting a Hyperlink or URL

1. From the Home screen, touch **Browser** .
2. Browse to a webpage.
3. Touch and hold on the link or URL, then touch **Copy link URL** on the pop-up menu.
4. To paste the copied link or URL, navigate to the desired field (or to another application), then touch and hold in a text field and touch **Paste** on the pop-up menu.

Using Bookmarks

While browsing, bookmark a site to quickly access it later.

Creating a bookmark

1. From the Home screen, touch **Browser** .
2. Browse to a website, then touch **Add Bookmark** .
   The **Add bookmark** options list displays. Confirm the **Label** and URL **Address** for the bookmark.
3. Touch **Add to** , touch the drop-down menu, and touch **Bookmarks**
4. Touch **OK** to save the bookmark.
   A gold star displays on the Bookmarked page.

English

Accessing Bookmarks and History

Launch a bookmarked pageor reload recent pages.

1. From the Home screen, touch **Browser**.
2. Touch **Bookmarks and History**
3. On the **Bookmarks** tab, use these options:
   - Touch a bookmark to load the page.
   - Touch and hold on a bookmark for these options:
     - **Open** : Open the bookmarked page.
     - **Open in new tab** : Open the linked page in a new window.
     - **Edit bookmark** : Make changes to the bookmark description.
     - **Add shortcut to home** : Create a bookmark on the Home screen.
     - **Share link** : Use Bluetooth, Email, or Gmail to send the link.
     - **Copy link URL** : Save the link's URL to the clipboard.
     - **Delete bookmark** : Remove the bookmark.
     - **Set as homepage** : Assign the bookmarked link as the home page.
4. On the **History** tab, touch , **Most visited** , **Today** **Yesterday** , or **Last 7 days** to use these options:
   - Touch a page to reload it.
   - Touch the ★ next to a page to bookmark it.
   - Touch and hold on a page for these options:
     - **Open** : Open the webpage.
     - **Open in new tab** : Launch the webpage in a new window.
     - **Add to bookmarks/Delete bookmark**: Bookmark the page or remove the bookmark for this page.
     - **Share link** : Use Bluetooth, Email, or Gmail to send the link.
     - **Copy link URL** : Save the link's URL to the clipboard.
     - **Remove from history** : Remove the record of this page.
     - **Set as homepage** : Assign the bookmarked link as the home page.

Browser Menu

While viewing a webpage, touch **Menu** for options:

- **New tab** : Open the webpage in a new window, under a new tab.
- **New incognito tab** : Open the webpage in a new window, under a new tab, and the pages you view in the new window will not appear in your browser history or search history. See the on-screen explanation of ***going incognito***
- **Find on page** : Search for content on the current page.
- **Share page** : Use Bluetooth, Email, or Gmail to send the webpage URL.
- **Save page** : Save this page. For more information, refer to *"Downloads"* on page 108.
- **Page info** : View information about the current page, including the URL.
- **Downloads** : View and manage recent downloads.
- **Print** : Print the current screen or page to a Samsung printer.
- **Settings** : Customize the Browser by using the following options:

General

- **Set homepage** : View and set the default first page that displays when you launch the Browser.
- **Sync with Google Chrome** : Associate or remove Android bookmarks

– **Form auto-fill** : Enable or disable form auto-fill to complete web forms with a single click.
– **Auto-fill data** : If **Form auto-fill** is enabled, set up the following information:
  - **Full name**: Enter your name.
  - **Company name** : Enter a company name.
  - **Address line 1** : Enter your address.
  - **Address line 2** : Enter any additional address information.
  - **City / Town** : Enter your city and town.
  - **State / Province / Region** : Enter addition location information.
  - **Zip code** : Enter your ZIP code.
  - **Country** : Enter your country.
  - **Phone** : Enter your telephone number.
  - **Email** : Enter a valid email address.

Privacy and Security

– **Clear cache** : Delete content and databases stored on the device.
– **Clear history** : Delete the list of previously-visited pages.
– **Show security warnings**: When enabled, the Browser warns you if there is a problem with a site's security.
– **Accept cookies** When enabled, allows Browser to save and read cookie information used by webpages.
– **Clear all cookie data** : Delete cookie information saved to the device.
– **Remember form data** : When enabled, stores information you enter into forms to make future forms easier.
– **Clear form data** : Deletes saved form information.
– **Enable location** : When enabled, sites you visit can request access to your location.
– **Clear location access** : Clear location access for all websites.
– **Remember passwords**: When enabled, saves usernames and passwords for sites you visit, to make future visits easier.
– **Clear passwords** : Clear all saved usernames and passwords.

Advanced

– **Select search engine** : Choose a search engine from Google, Yahoo!, or Bing.
– **Open in background** : When enabled, new windows open behind the current window.
– **Enable JavaScript** : When enabled, the Browser automatically runs JavaScript scripts on pages you visit.
– **Enable plug-ins** : When enabled, the Browser automatically loads and runs plug-ins on pages you visit.
– **Website settings** : View and manage settings for individual websites.
– **Open pages in overview** : When enabled, displays an overview of newly-opened pages.
– **Auto-fit pages** : When enabled, the Browser automatically sizes webpages to fit your device's display.
– **Block pop-up tabs** : When enabled, blocks pop-up windows.

–**Load images** : When enabled, images are automatically loaded when you visit a page. When disabled, images are indicated by a link, which you can touch to download the picture.

–**Text encoding** : Choose a default character set for webpages.

–**Reset to default:** Clear all browser data and reset all settings to the factory defaults.

Labs

–**Quick controls** : When enabled, to the left or right edge of the screen and swipe inward to access quick controls and hide Application and URL bars. To cancel, display the Quick controls and touch **Menu** →**Settings**→**Labs** and uncheck **Quick controls** .

–**Most Visited Homepage** : Sets your homepage to show the most visited pages.

–**Google Instant** : When enabled, you can use Google Instant when you use Google Search to show results as you type. Enabling this option can increase date use.

Managing Applications

Downloading and installing new applications to your tablet can extend its functionality in many ways.

You can download and install applications from the included Applications store. To open the Applications store:

1. Touch the **Launcher** icon.
2. Touch the **Apps Marketplace** icon.

When installing an application, it will tell you what functions it needs to control and if it needs access to your data. Make sure you review these access requirements carefully before completing the installation.

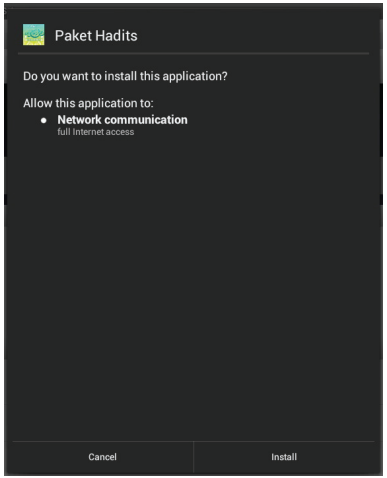

Be especially cautious with applications that request access to many functions or to a significant amount of your data. You are responsible for the results of applications installed on your tablet.

English

To uninstall an application:

1. From the Home screen, touch the **Launcher Tab**.
2. Touch Settings to open the **Settings** menu.
3. Touch **Apps**, a list of all applications installed on the tablet will display on screen.

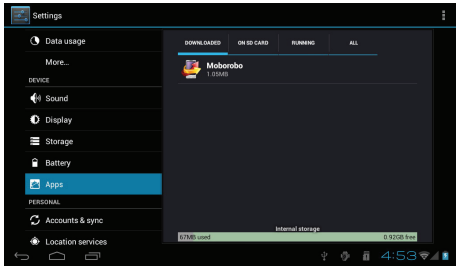

4. Touch the name of the application you want to uninstall; the Application Info screen will open.

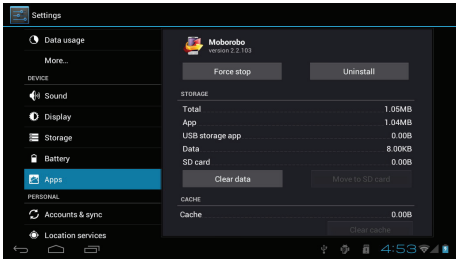

5. Touch **Uninstall**. The tablet will prompt you to confirm.

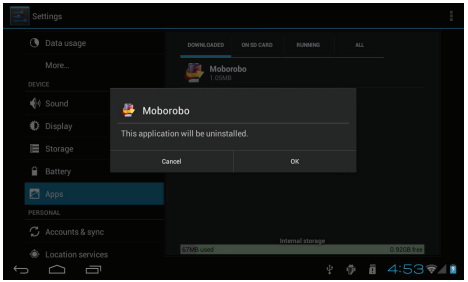

6. Touch **OK** to uninstall the application.

*Or you can uninstall an application from the Launcher screen directly. Touch and hold an application icon until the **Uninstall** icon* Uninstall *appears, drage the application icon to the **Uninstall** icon to uninstall the application.*

Optional Connections

Connecting to a Computer

Connect the tablet to a computer to transfer files.

1. **Connect your tablet to the computer.**

With the included USB cable:

- Plug the small end of the cable into the USB 2.0 Hi-speed connector of the tablet.
- Plug the large end of the cable into an available USB 2.0 Hi-speed port on the computer.

When your tablet is connected, a USB icon will appear in the Notification bar.

- Touch the Notification bar to open the notifications panel.

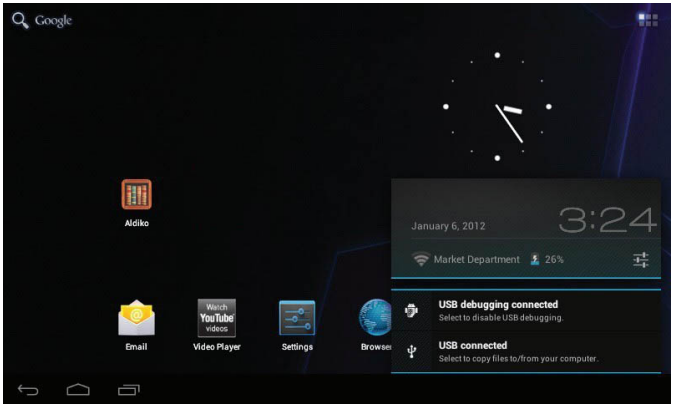

The Tablet's "mass storage mode" is compatible with many operating systems including: Microsoft® Windows® XP, Vista, 7 or higher and Mac OS or Linux.

English

2. Mount the storage drive.

✦ Touch **USB connected** to mount the tablet's built-in storage, then touch "Turn on USB storage" and "OK" when prompted to confirm. When mounted, you can copy fles to/from your computer to it.

Your tablet will be recognized by the computer as a Removable Storage drive. Drag and drop files between your tablet and the computer. To learn more about copy ing files, please refer to the documentation included with your computer or operating system.

Connecting to a TV

Connect to a TV to enjoy your tablet from the comfort of your living room. An HDMI cable (Type A-to-Type C) is required to connect the tablet to a TV.

The tablet will recoginze and match the capabilities of the TV automatically.

To connect the tablet to the TV:

1. Plug the small end of the HDMI cable into the mini HDMI connector of the tablet.
2. Plug the large end of the HDMI cable into the HDMI port on the TV.
3. Turn on the TV, and set its display mode to the HDMI port that the tablet is connected to.

The tablet's display will be output to the TV screen.

If you need help setting the display mode of the TV, please refer to the documentation provided by the TV manufacturer.

Connecting Headphones

Connect a pair of headphones (or earphones) to the tablet to enjoy media in private.

Lower the volume level of the tablet before connecting headphones, and then slowly raise the volume to a comfortable listening level.

- The headphones must have a 3.5 mm (1/8 in) plug.
- When headphones are connected, speaker output will be disabled automatically.

> *Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.*

Using the USB Full-Size Adapter

The USB full-size adapter can be used to connect and use USB devices with the tablet. The adapter converts the mini USB port on the tablet into a USB On-the-Go (OTG) connector.

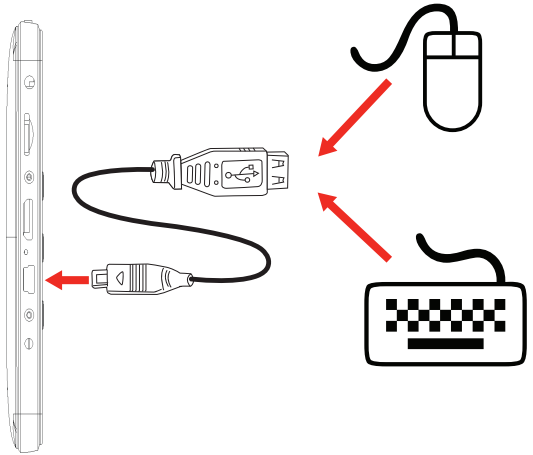

Connecting a Keyboard

For times when you want to type for an extended period of time, you may want to connect a full-size keyboard to the tablet.

Use the included USB full-size (Type A) adapter to connect a keyboard to the tablet.

English

You may also use this connection to add a mouse to the tablet.

The adapter supports one connection at a time. To use a keyboard and mouse simultaneously, you will need to add an external USB hub.

Connecting a Storage Device

Use the included USB full-size (Type A) adapter to connect a storage device to the tablet (e.g., a USB flash memory drive).

This connection supports a maximum storage size of 16 GB. For additional storage capacity, a microSDHC card can be added to the tablet.

Specifications

Please visit www.doublepowertech.com for the latest product information. Design, specifcations, and manual are subject to change without notice.

Processor	Cortex A8 (1.2G)
RAM	512MB
Storage	4GB flash built-in microSDHC card slot (max. 32GB supported)
Display	7.0" TFT LCD (800 x 480), capacitive touchscreen
Networking	Wi-Fi IEEE 802.11 b/g/n
Video Output	Mini HDMI, type C (1080p and 720p supported)
Audio Output	3.5 mm headphone
PC Interface	USB 2.0 Hi-speed
Additional Features	Front-facing camera (0.3 MP) Built-in microphone Stereo speaker
Operating System	Android™ 4.0

Power	Rechargeable Li-poly battery Power Adapter (DC 5V)
Playback Time (hours) *	Up to 9 hours music, 4.5 hours video, 5 hours web browsing

* *Music was tested with a 128 kbps MP3 file; video was tested with a 1920 x 1080 MPEG-4/AVC file; browsing was tested with the screen brightness set to default. Actual playback results may vary.*

Support

English

If you have a problem with this device, please check our website at www.doublepowertech.com for Frequently Asked Questions (FAQ) and product updates. If these resources do not resolve the problem, please contact Technical Support.

DOPO SERVICE CENTER

Email: techsupport@doublepowertech.com

Web: www.doublepowertech.com

Phone: For US Residents: 909-974-2859
Monday-Friday (8:30AM-5:00PM PST)

Safety Notices

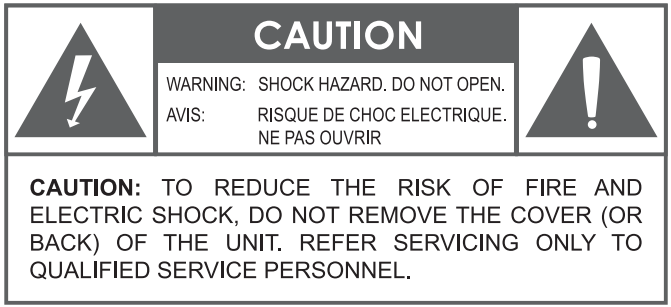
CAUTION
WARNING: SHOCK HAZARD. DO NOT OPEN.
AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

WARNING: To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

Protect your hearing: Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

Note: If the product suddenly has no response or powers off, an electrostatic discharge may be the cause. In this circumstance, please follow the procedures below for recovery:

- Turn off the unit by pushing and holding the slide button at the right (Power off position) for 15 seconds.
- Turn on the unit again

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Important Safety Instructions

1. Read Instructions: All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions: The safety and operating instructions should be retained for future reference.
3. Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions: All operating and usage instructions should be followed.
5. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. Water and Moisture: Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
9. Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
10. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or shout-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
12. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
13. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if

the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.

14. Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
15. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
16. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Warranty

ONE-YEAR LIMITED WARRANTY ON PARTS AND 90 DAYS ON LABOR

DOPO provides a warranty to the original purchaser of a new Product against defects in materials and workmanship for a period of one year of non -commercial usage and ninety (90) days of commercial use. If a Product covered by this by this warranty is determined to be defective within the warranty period, DOPO will either repair or replace the unit at its sole option and discretion.

Parts and Labor

There will be no charge for parts or labor during the first ninety (90) days of the warranty period. Thereafter and up to one year from the date of purchase, parts only are under warranty. There will be a labor fee if repairs are required during this time. Replacement parts and units may be new or recertified at DOPO's option and sole discretion.

Replacement parts and units are warranted for the remaining portion of the original warranty or for ninety (90) day from warranty service or replacement, whichever is greater.

Type of Service

Defective Products must be sent to a DOPO service center to obtain warranty service. DOPO is not iresponsible for transportation costs to the service center, but DOPO will cover return shipping to the customer. Pre-authorization is required before sending any unit in for warranty service.

Product returns to DOPO's service centers must utilize either the original box and shipping material or packaging that affords an equal degree of protection. DOPO Technical Support will provide instructions for packing and shipping the covered Product to the DOPO service center.

Limitations and Exclusions

DOPO's one-year limited warranty only covers defects in materials and workmanship. This warranty does not cover: cosmetic damage, units that are dropped, normal wear and tear, improper operation, improper voltage supply or power surges, signal issues, damages from shipping, acts of God, any type of customer misuse, modifications or adjustments, as well as installation and set-up issues or any repairs attempted by anyone other than by a DOPO authorized service center. Products with unreadable or removed serial numbers, or requiring routine maintenance are not covered. This one year limited warranty does not cover Products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

there are no express warranties other than those listed or described above.Any omplied warranties, including any implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to theperiod of time set forth above.DOPO'S total liability for any and all losses and damages resulting from any cause from any cause whatsoever including DOPO'S negligence, alleged damage, or defective good's,whether such defects are discoverable or latent,shall in no event exceed the purchase price of the product.DOPO shall not be responsible for loss of use,loss of information or data, commercial loss, lost revenue or lost profits, or other incidental or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.**THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.**

SERVICE CENTER

1845 S.Vineyard Ave.Ste.4
Ontario,CA 91761
Tel:**909-974-2859**
Fax:**909-974-2865**
Hours:8:30AM-5:00PM PST

TO OBTAIN WARRANTY SERVICE

contact DOPO Technical Suport
email: **TechSupport@doublepowertech.com**
phone: **800.838.3315**
from 8:30AM to 5:00PM Monday through Friday Pacific Time.

Pre-authorization must be obtained before sending any product to the Service Center.Proof of purchase in the form of a purchase receipt or copy there of is required to show that a product is within the warranty period.